

# **REVERSIBLE WINDOW OPERATION**




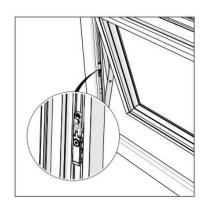


### RESTRICTOR LEVER

- The restrictor lever can be found on the left hand hinge, when viewed from the inside.
- The restrictor lever must be pressed to open and close the sash, when locked out.
- Please note: the restrictor lever is only present in sash sizes 486mm and above.

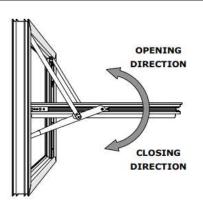


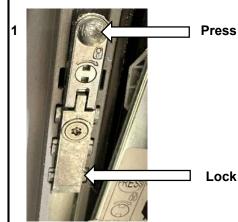


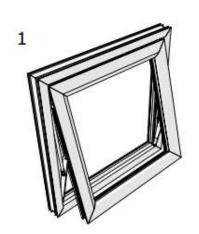

#### SAFETY POSITION


- Open the window until the hinge locks the sash out and restricts at the first position.
- In this position the hinge will provide resistance to closing when under mild wind load. Under moderate wind loads, further resistance can be achieved by engaging the key operated lock out feature.
- The restrictor lever will then need to be pressed in order to release the sash from this position (this could be to open or close).

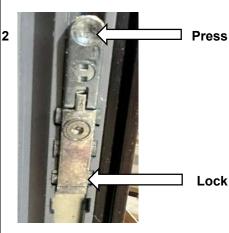


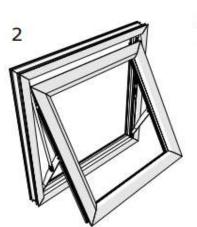

## **VENTILATION POSITION**

- Continue to open the window further until it locks out and restricts at the second position.
- In this position the hinge will provide resistance to closing when under moderate or higher wind loads.
- The restrictor lever will then need to be pressed in order to release the sash from this position (this could be to open or close).

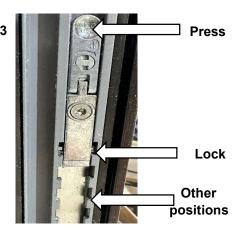

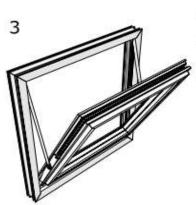

# WASH POSITION

- Fully reverse the sash until it engages into this third position.
- The restrictor lever will then need to be pressed in order to release the sash from this position (to dose).

